


DEVASTATOR

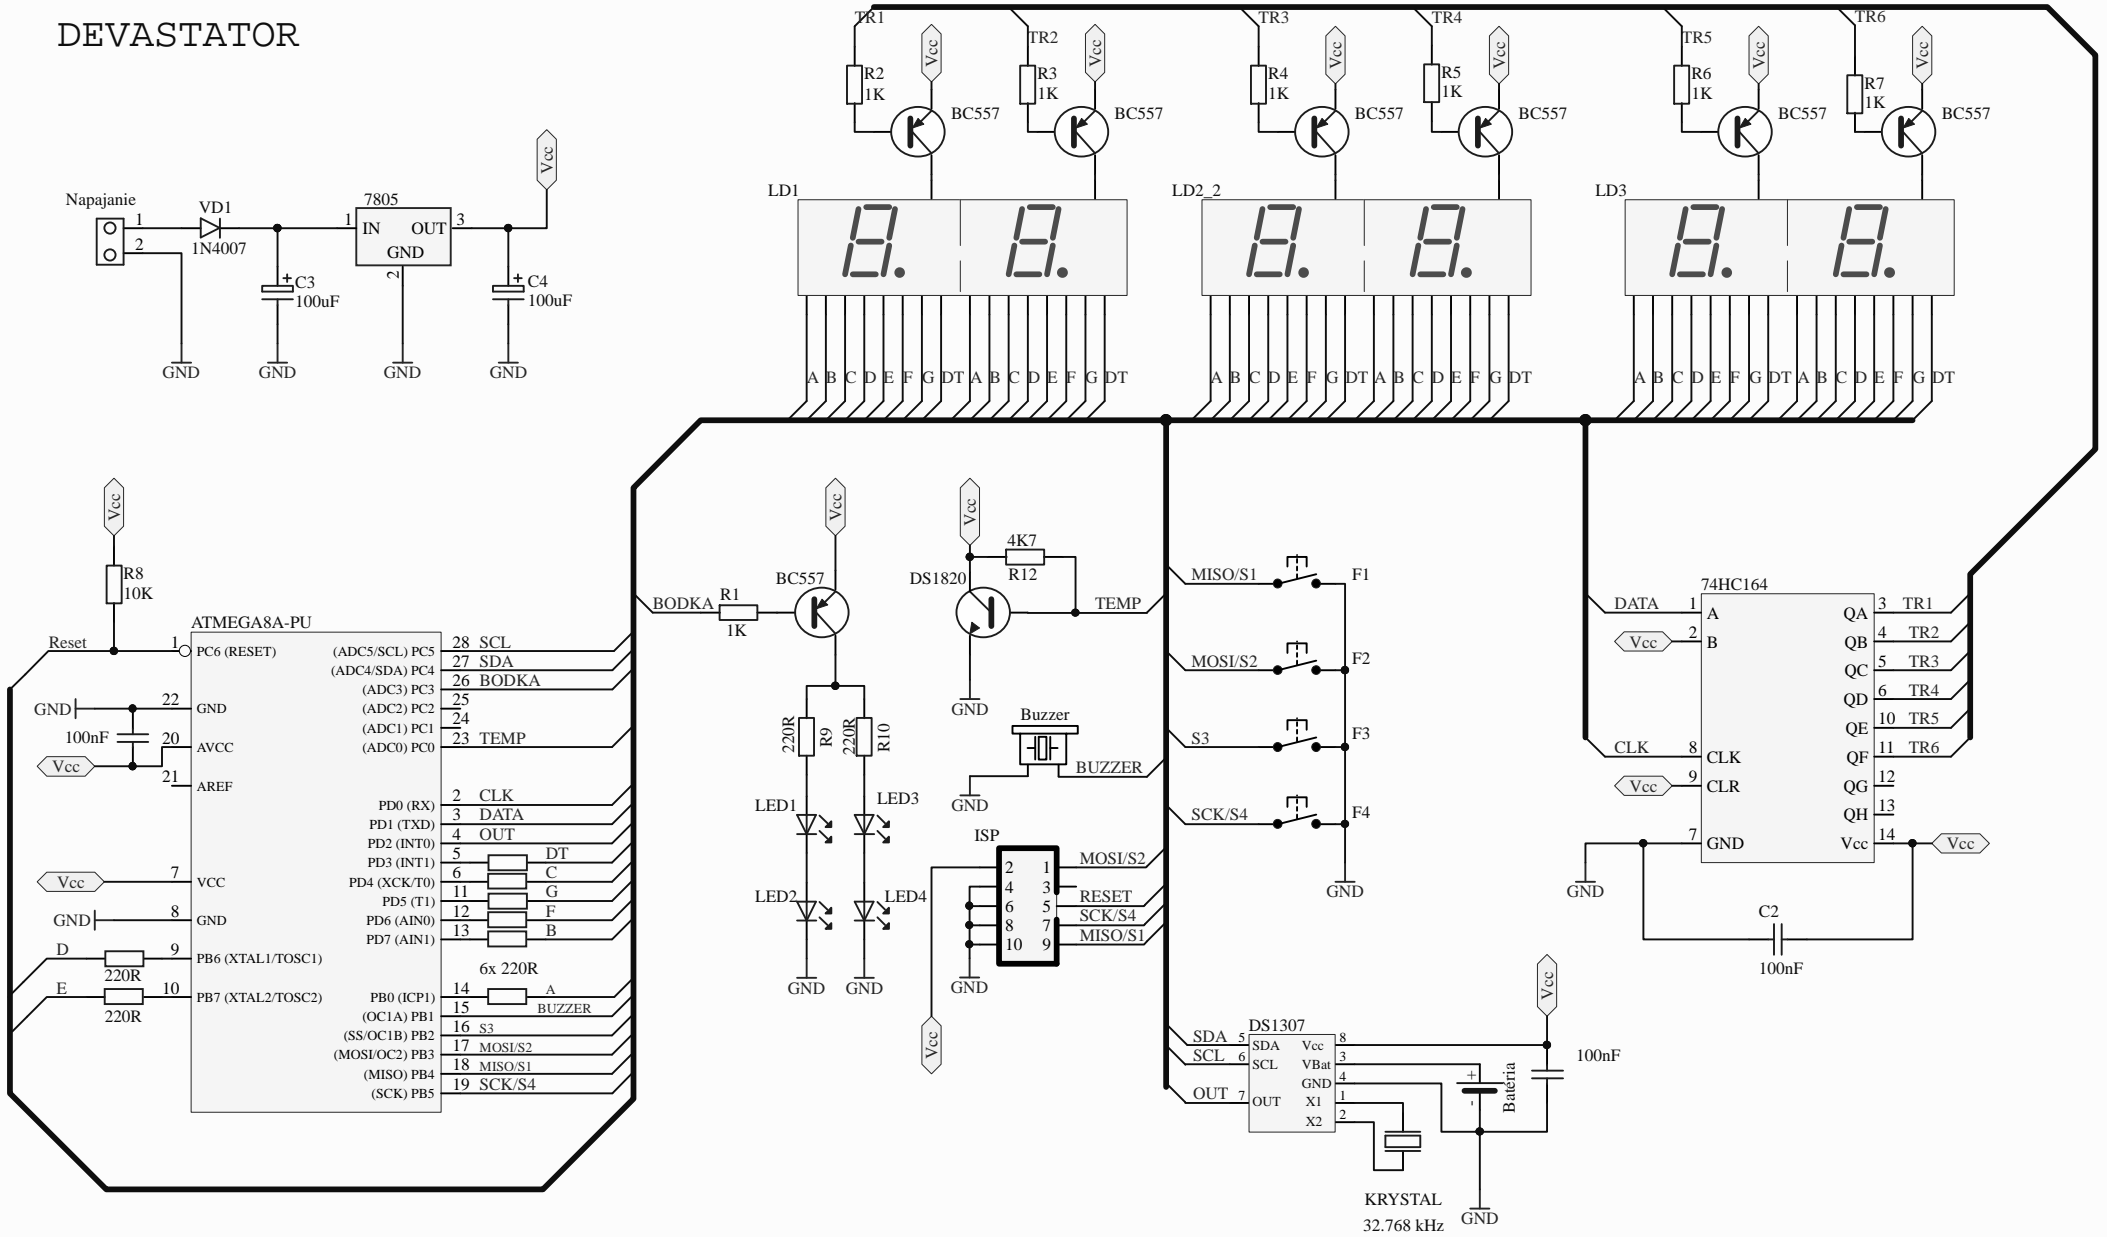

BUS:TEMP[0..0],BODKA[0..0],SDA[0..0],SCL[0..0],CLK[0..0],DATA[0..0],OUT[0..0],DT[0..0],A[0..0],B[0..0],C[0..0],D[0..0],E[0..0],F[0..0],G[0..0],BUZZER[0..0],S3[0..0],MOSI/S2[0..0],MISO/S1[0..0],SCK/S4[0..0],RESET[0..0]

DSSTER:TR[1..6]